

Boost

Tables

Adjustable Height

HPFi



Boost

Tables

Adjustable Height

TABLE OF CONTENTS

Product Overview	2
Parts Diagram	3
Safety Information	4 - 5
Assembly Instructions	6 - 9
Operation	10 - 11
Troubleshooting	12 - 13
Technical Data	14
Standards & Certifications	15

OVERVIEW

We've been hearing that "sitting is the new smoking". Sitting for long stretches every day does have a number of health consequences. The latest implication is that more time you spent sedentary can impact your brain health as well as physical health. You don't have to move very much - just standing can help.


Standing can increase blood flow to the brain to facilitate thinking. But doing office or school work while standing conflicts with what we were previously taught. Maybe it was wrong to "sit down and focus". Maybe it is time stand up and **Boost** your creativity and thinking.

Boost tables feature adjustable height work surfaces for easy transition from sitting to standing position. They are available in single or dual stage with "T" or a cantilevered "C" style leg.

- Single stage leg adjusts from 28" - 47" overall table height
- Dual stage leg adjusts from 25" - 49" overall table height
- Travel speed of 1-3/8" per second
- 1" thermal fused laminate tops with matching 3mm edge banding
- Steel legs include adjustable floor glides
- Basic up/down switch is standard; programmable switch optional
- Power consumption less than .3 watts
- Noise level less than 50 db
- Maximum load rating 100 lbs. (200 lbs. including top surface)
- Meets ANSI/BIFMA X5.5 test standards
- UL 962 Approved



PARTS DIAGRAM

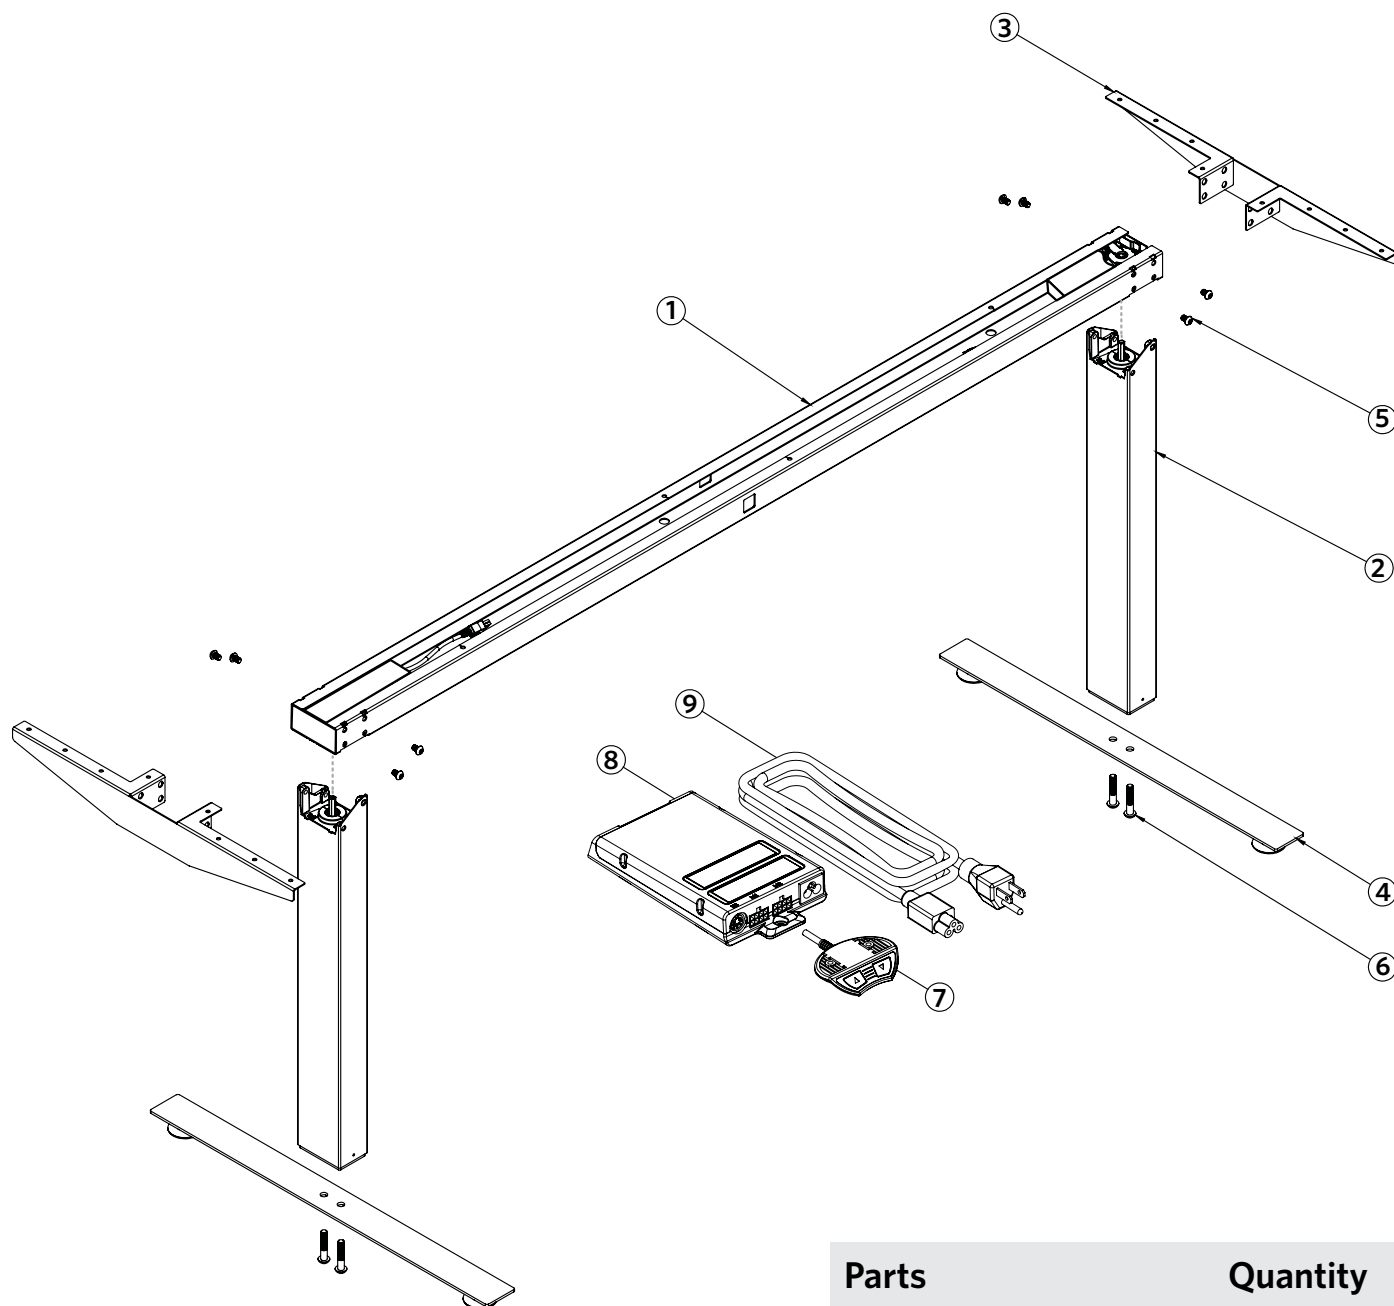

Parts	Quantity
1. Beam	1
2. Column	2
3. Top Support	2
4. Foot	2
5. M8 x 1.25 x 12 mm Screw	8
6. M10 x 1.5 x 50 mm Screw	4
7. Handswitch	1
8. Control Box	1
9. Power Cord	1
10. 1" Wood Screws (not shown)	24

SAFETY INFORMATION

WARNING: To reduce the risk of death, serious injury, or property damage, read and follow this safety information and the provided instructions when assembling this product. Do not change or replace components and accessories provided by OMT-Veyhl.

INSTALL ONLY APPROVED WORK SURFACES

This table system does not include a work surface (desktop). Work surface must be at least $\frac{3}{4}$ " thick and weigh no more than 5 lb. per square foot (For example, a 2'x6' desktop should weigh no more than 60 lb). Do not exceed a maximum weight for the desktop of 75 lb. To prevent table from tipping or collapsing, make sure the desk frame is not overloaded by the weight of tabletop and objects you plan to put on the table. If you are unsure, contact customer service.

KEEP AWAY FROM CHILDREN


This table system is not designed for use in homes or other areas accessible by small children. For indoor commercial office use only.

BE CAREFUL WHEN ADJUSTING DESK HEIGHT

Body parts and property can be caught between the moving work surface and an immobile obstacle (such as shelves, furniture, window sills, or walls). Keep at least one inch of clearance around desk and make sure nothing is in table's path for its entire range of motion.

Before raising or lowering:

- Check surroundings on all sides of desk are clear
- Make sure corded objects will not be pulled off table or cause other objects to fall
- Make sure desk power cord moves freely as desk moves up and down

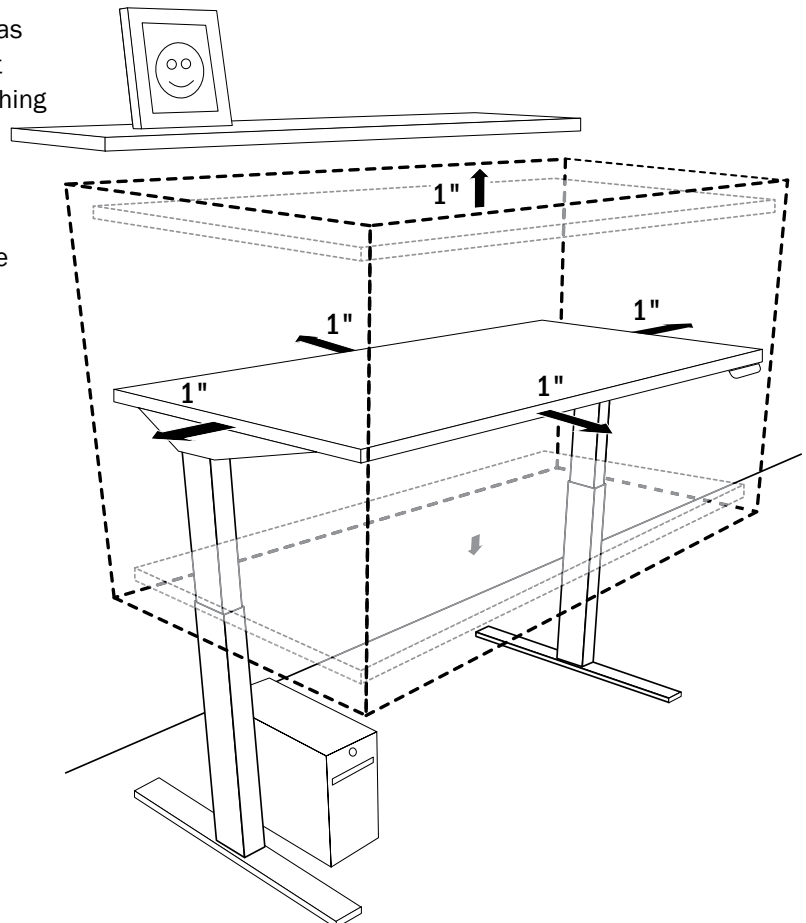

DO NOT OVERLOAD DESK

To prevent table from tipping or collapsing, make sure the desk frame is not overloaded by the weight of tabletop and objects on table. Evenly distribute load; excess loads near edges can reduce stability and lead to tip over.

- Do not exceed maximum load (including weight of desktop) of 200 lb. (91Kg) for two-leg configuration, and 250 lb. (113 Kg) for three-leg configuration
- Do not exceed edge load of 25 lb. when positioning monitors or mounting accessories.
- Do not sit or stand on table

USE CARE WHEN MOVING DESK

- Clear objects and equipment from table before rolling to reduce the risk of tipping over.
- Adjust the desk to its lowest height before moving
- To disconnect, turn all controls to the off position, then remove plug from outlet
- Do not move a loaded desk
- Do not lift the desk by the work surface (desktop)

DO NOT OPEN ELECTRICAL COMPONENTS

Do not attempt to service table components. There are no user-serviceable parts inside the motor control units or table legs. If your table needs service, contact customer service. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged. Return the furnishing to a service center for examination and repair.

KEEP TABLE FRAME DRY

Keep all electrical components away from water and high humidity. Clean only with a dry or slightly damp cloth. Do not spray cleaning solutions directly onto table system.

GROUNDING INSTRUCTIONS


This product is equipped with a cord having an equipment-grounding conductor and a grounding plug.

Use only the cord provided. Make sure that the product is connected to an outlet having the same configuration as the plug (as shown in Illustration A) that is properly installed and grounded in accordance with all local codes and ordinances.

Do not modify the plug provided with the product – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

No adapters are to be used with this product.


Keep cord away from heated surfaces.

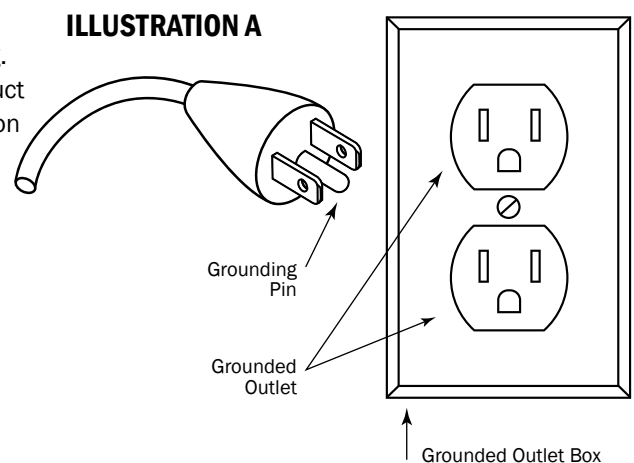

ASSEMBLY


1 Assemble the foot to the column.


Assemble using the M10 x 1.5 x 50 mm length screws (2 per column). The maximum tightening torque for these screws is 48Nm (35 lbs-ft).

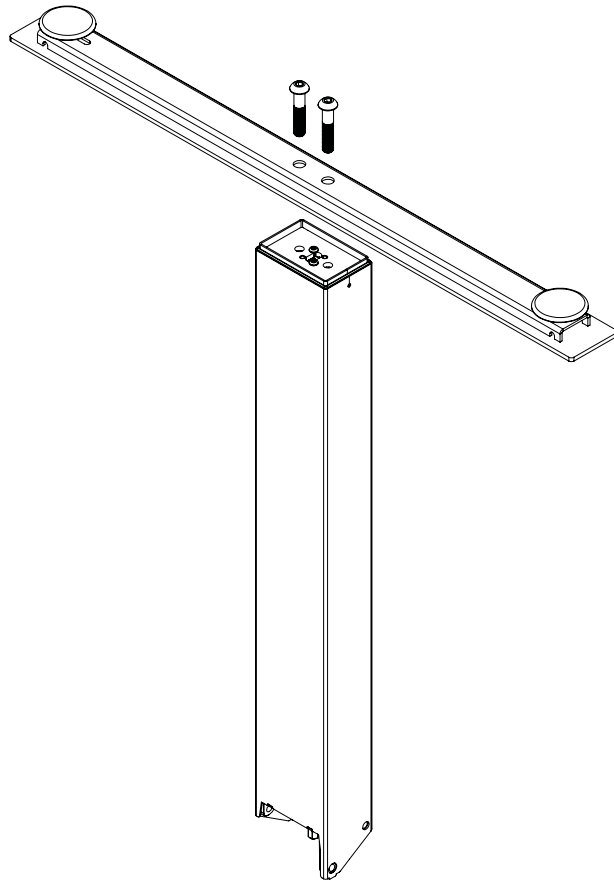

2 Assemble the column to the beam.


Make sure that the male hex adaptor on the column is aligned with the female hex adaptor in the motor. If they are not aligned, use a 9mm wrench to turn the male hex adaptor on the column to align with the female hex adaptor in the motor. Failure to do so will damage the motor! Do not try to turn the female hex adaptor in the motor.

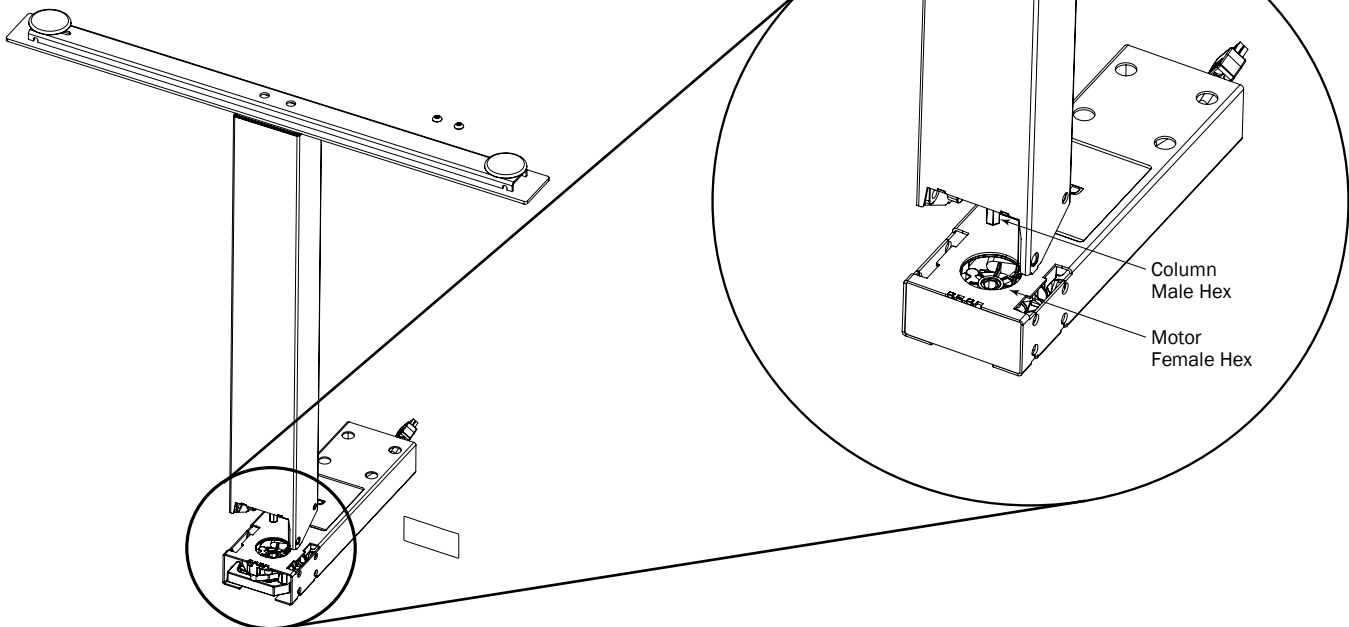

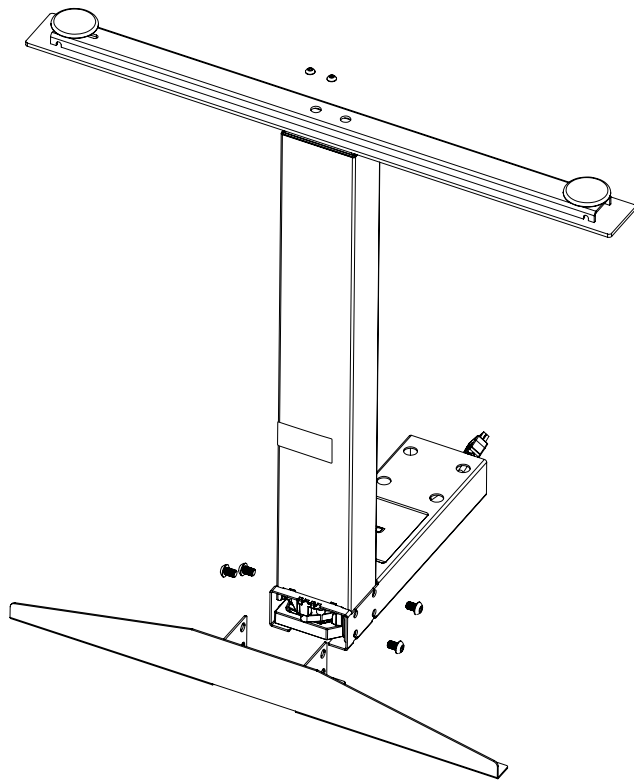

3 Assemble the top support to the beam and column.


Assemble using the M8 x 12mm length screws (4 per column). The maximum tightening torque for these screws is 24Nm (18 lbs-ft). Align the top support holes with beam assembly. Repeat for remaining column.

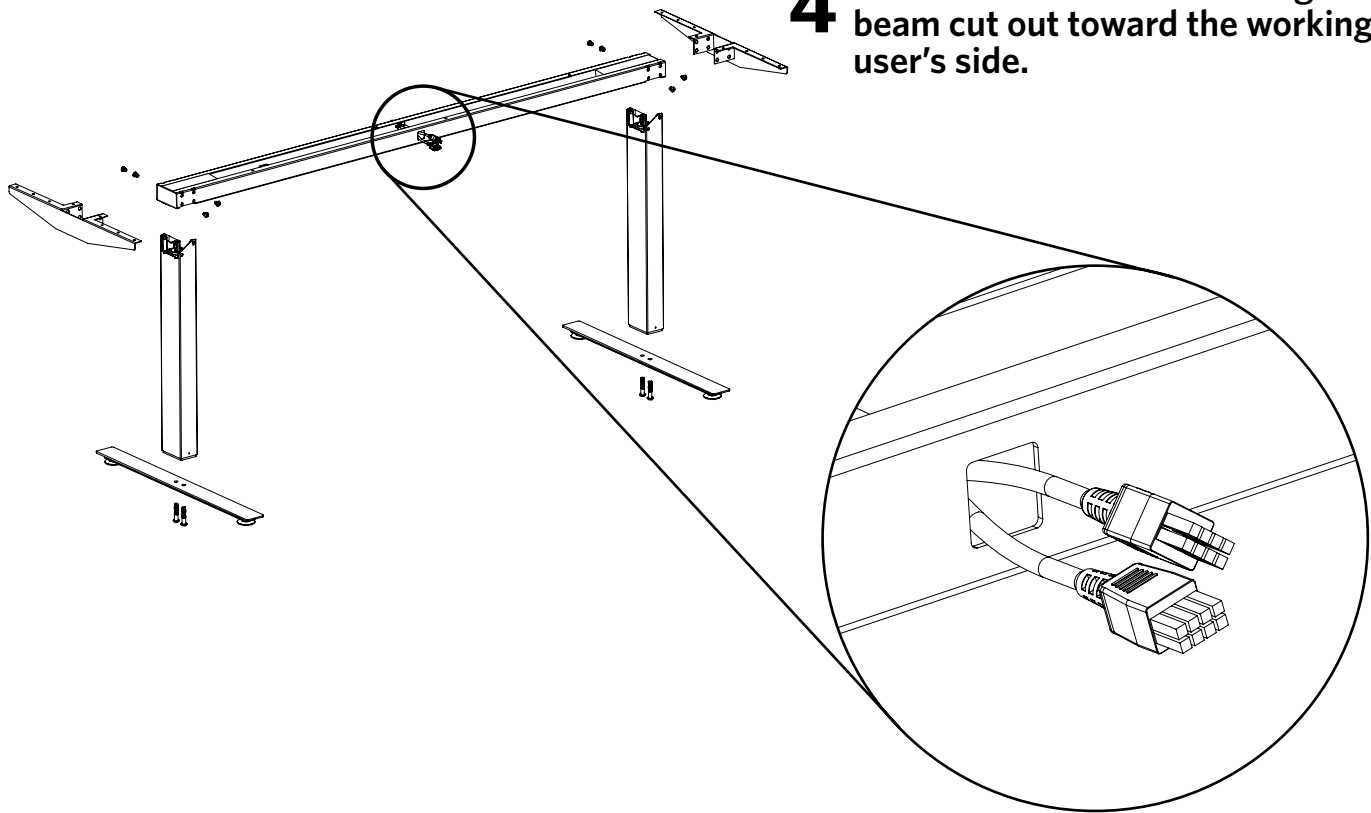

4 Feed the motor cables through the beam cut out toward the working / user's side.


5 Fasten the table frame onto the table top.


Assemble using the supplied 1" wood screws (8 per column, 4 in the beam).

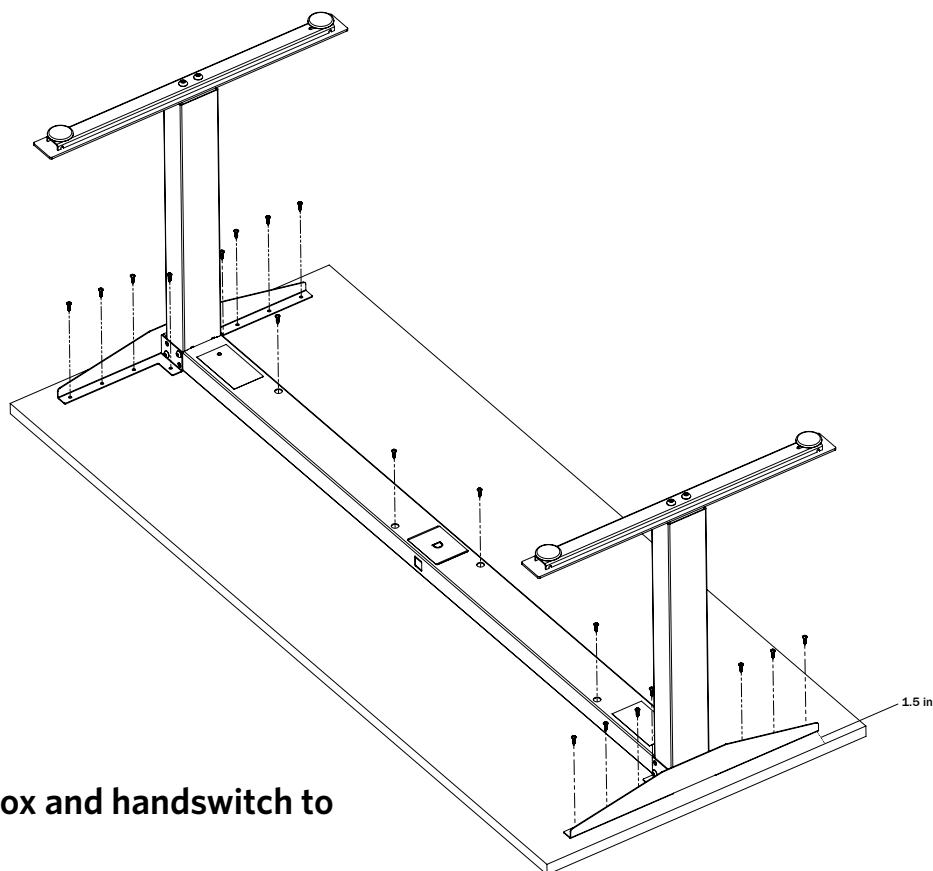

6 Fasten the control box and handswitch to the table top.

Make sure the control box and handswitch are fastened in a location where all the cables will connect without being in tension. Use the 1" wood screws included.

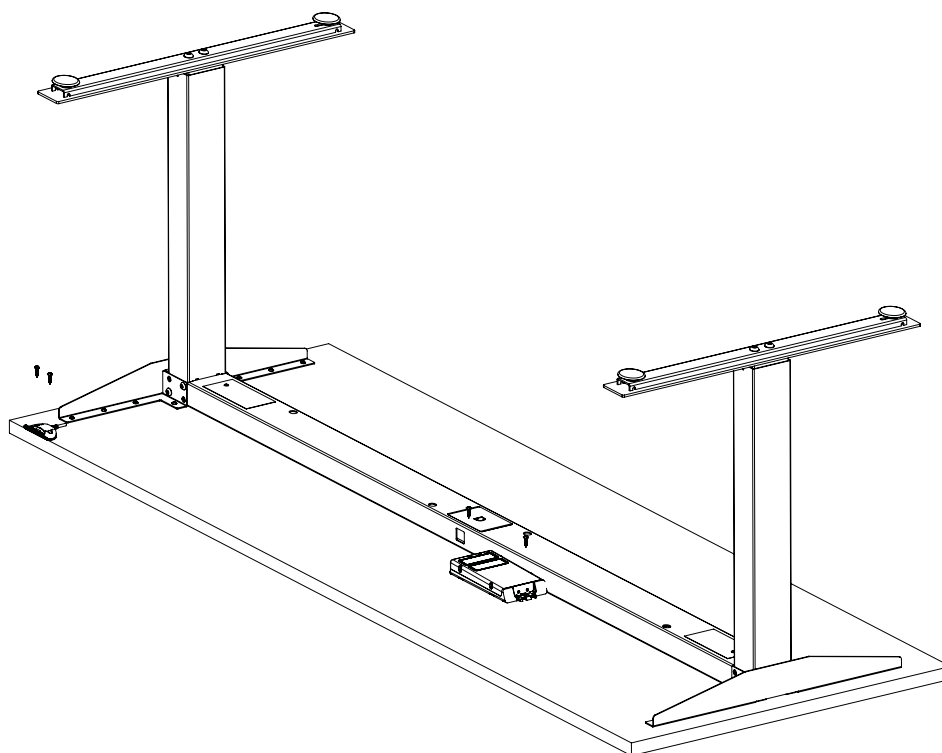

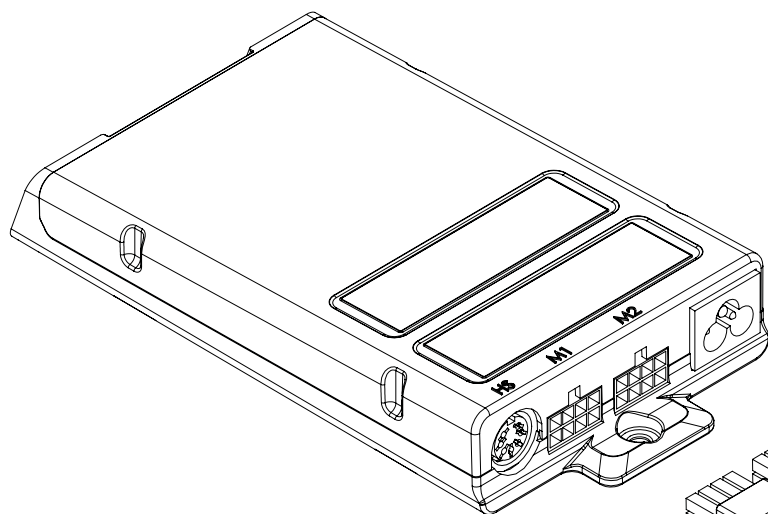

7 Connect the motor cables to the Control Box.


The motor cable plug-in connection has to click into place. If a control box is used which has more plug-in terminals than needed, **you must connect the M1 first.** (The extra terminals can be left open.)

Connections to the control box:


M1-M2 = Connections to the columns

HS = Connectors for the handset


AC = Connector to the 3-pin power cord

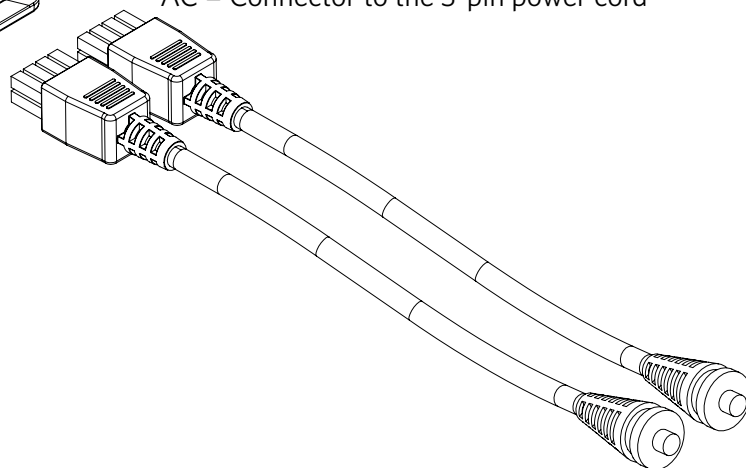

8 Connect the Handswitch (HS) cable to the Control Box.

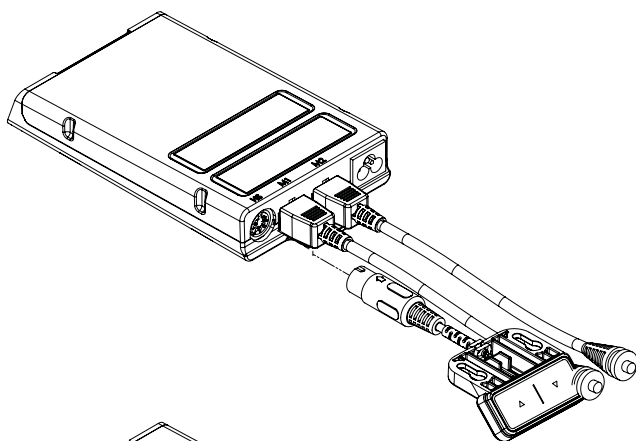

9 Connect the Power Cord (AC) to the Control Box.

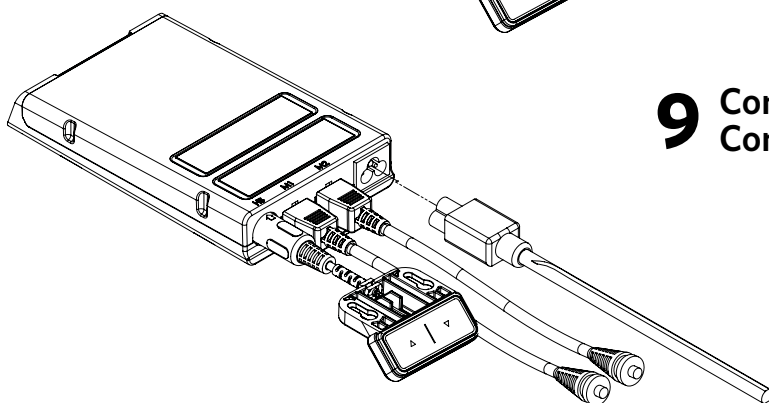

10 Attach all cables to the table frame or on the underside of the table top.

Attach cables in order to avoid any damage during operation.

OPERATION

INITIALIZATION/RESET

The desk may need to be initialized/reset after any of the following:

- After assembly
- After disconnection from the power supply
- After any impact on the table top.

To initialize/reset, you will need to move the table to the lowest position by holding the DOWN button of the handswitch until all columns reach the lowest position. Then press the DOWN button again and hold it pressed for five seconds or until a slight movement of the table drops down to the machine zero point and back up to the operation zero point. Once the table stops moving, release the DOWN button. If the button is released too early, this leads to a malfunction of the table and you must repeat the reset process.


The upper height position is programmed into the control box. For this reason, only use the control box that has been provided with the specific table frame. **Under no circumstance should a control box from one table be moved to another.**

NORMAL HANDSWITCH OPERATION (for all handswitch types)

By pressing the UP or DOWN buttons, the table will move up or down to the desired position. Once the desired position is reached, let go of the UP or DOWN button. The table will stop once it reaches the lower or upper height position.

PROGRAMMABLE HANDSWITCH OPERATION (optional)

This programmable handswitch is equipped with a display for showing the current table height in centimeters or inches.



The handswitch also will display an error code if an error is detected by the control box. When an error is detected, the display will show an error code "EXX," instead of the current table height. To resolve the error, see the Troubleshooting Section .

The programmable handswitch also has the ability to save up to four different height positions.

PROGRAMMABLE HANDSWITCH OPERATION (continued)

CHANGE THE HEIGHT UNIT (inches or centimeters)

The height display of the handset can display either centimeters or inches. With the help of the S5-menus, the unit can be changed. If the display was originally set to centimeters, then after the procedure noted below it will change to inches or vice versa.

To change the unit, follow these steps:

1. Press and hold the 1, 2, and UP buttons for 5 seconds until the display shows “S 5”.
2. Confirm by pressing the “S” button. Now the display will have changed.

To exit the menu without making a selection, wait approximately 10 seconds until the height display appears again.

ADJUSTMENT OF THE HEIGHT DISPLAY

If the indicated value does not match the actual height of the table top, the display can be corrected as follows:

1. Press and release the “S” button.
2. Press and hold the DOWN button for 5 seconds until the display starts to flash.
3. Measure the table height and enter the measured value (depending on the setting in centimeters or inches) with the UP or DOWN button. Confirm the entry by pressing the “S” button.

To exit the menu without making a selection, wait 10 seconds and the height display will appear again.

SAVE MEMORY POSITION

Drive the table up or down to the desired height. Press the “S” button (in the display “S -” is shown.) Select a position by pressing on any of the four number buttons, 1-4, (the display will show the setting as “S1”). The save position procedure is confirmed by the control box with a double click sound. After approximately 5 seconds, the display shows the current table height. Repeat steps to save a maximum of four different positions.

RECALL MEMORY POSITION

Press and hold the desired memory location button (1, 2, 3 or 4) and the table moves independently from the current position into the saved position. The button must be pressed until the position is reached. If the button is released, the table will stop short of the desired height.

TROUBLESHOOTING

ERROR CODE	SOURCE	SOLUTION
Table does not move	No power supply	Plug in the power cord or check the connection on the control box
	No connection or a loose connection to the drives	Verify the plug connections of the motor cable to the control box
	No connection or a loose connection to the handswitch	Verify the plug connections of the motor cable to the control box
	Max lifting capacity is exceeded	Reduce the weight or load on the desktop
	Max time limit is exceeded	Control is activated automatically after approx. 9 minutes
	Defective drive	Contact customer service
	Defective control box	Contact customer service
	Handset is defective	Replace the handset
Table moves down at a slow rate	Control box expects new reset	Reset control box. (See page 18)
During operation, tables moves at a slow rate	Max lifting capacity is exceeded	Reduce weight
Table moves on one side only briefly and then stops	No connection or a loose connection to the drives	Verify the plug connections of the motor cable to the control box and reset the control box
	Defective drive	Contact customer service

HANDSWITCH DISPLAY


ERROR CODE	SOURCE	SOLUTION
HOT	The control box monitors the duty cycle (time-controlled) and its max temperature. A value has been exceeded.	Wait until the "HOT" display goes out - the table is working properly again
E00	M1 – Internal Fault	Unplug and contact customer service
E01	M2 – Internal Fault	
E02	M3 – Internal Fault	
E12	M1 – Defect	Unplug. Correct the external short circuit and/or verify the cable to the drives. Plug cables into the control box and re-run table.
E13	M2 – Defect	
E14	M3 – Defect	
E24	M1 – Overcurrent	Collision → resolve if necessary
E25	M2 – Overcurrent	Max load exceeded → remove excess load from the table
E26	M3 – Overcurrent	If the problem still exists, please contact customer service
E36	M1 – Not connected	Motor not connected. Check cable / connector to the drive. Reset the table (see page 18).
E37	M2 – Not connected	
E38	M3 – Not connected	
E48	Overcurrent drive 1	Collision → resolve if necessary
E49	Overcurrent drive 2	Max load exceeded → remove excess load from the table
E55	Drive 1 - Synchronization is lost	If necessary, reduce the load on the table
E56	Drive 2 - Synchronization is lost	Reset the table (see page 18)
E60	Collision identified	Option ISP function. Remove source.
E61	Drive replaced	The connection to the drive is interrupted or a new drive is connected. Reset the table (see page 18).

If it is not possible to resolve an error as described, disconnect the power cord, wait a few minutes and reset the table again.
If the error still occurs, remove the table from the power source and contact customer service.
(Error Code list is valid from firmware 1.7.5 and higher)

TECHNICAL DATA

GENERAL CONTROL BOX	
Power supply	120 VAC $\pm$ 10% / 60 Hz
Standby power consumption, primarily	<0.3 W
Operating temperature	0-35°C
Protection class	IP 20
Maximum power output	216VA/24V
TWO-COLUMN FRAME WITH CONTROL BOX	
Maximum lift capacity	200 lb (≈ 90 kg / 890N)
Adj. range, depending on version	View Illustration B
Maximum input current	5 A
Maximum duty cycle	10% (2 min. on / 18 min. off)
THREE-COLUMN FRAME WITH CONTROL BOX	
Maximum lift capacity	250 lb (≈ 113 kg / 1112N)
Adj. range, depending on version	View Illustration B
Maximum input current	6.5 A
Maximum duty cycle	10% (2 min. on / 18 min. off)

ILLUSTRATION B

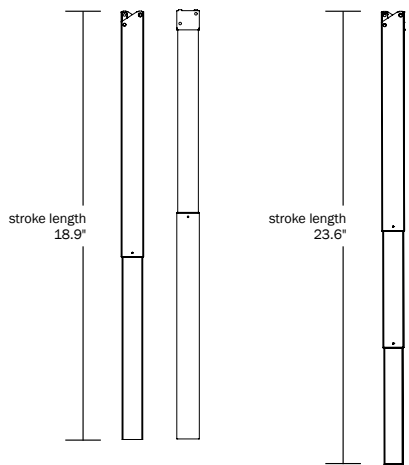

CUSTOMER SERVICE

If you have any problems with
your table base, please contact
our service department.

Tele.: 800.447.3462
Fax: 800.231.6784

STANDARDS & CERTIFICATIONS

The drive system is tested according to the following standards:

UL 962

Issued: 2014/11/07 Ed: 4 Household and Commercial Furnishings

CSA C22.2#68

Issued: 2009/09/01 Ed: 7 (R2014)

Motor-Operated Appliances (Household and Commercial);

Gen. Inst. No.1: 2010, Gen. Inst. No.2: 2010

Meets 2014 BIFMA standards.

