



INSTRUCTIONS FOR BEDFORD (TRAD) BRIDGE ASSEMBLY AND INSTALLATION


1. ATTACH ANGLE PLATE TO THE UNDERSIDE OF THE DESK TOP, AGAINST THE MOUNTING RAIL. [SHOWN IN FIGURE 3.] SECURE THIS PLATE USING (3) #8-3/4" SCREWS.

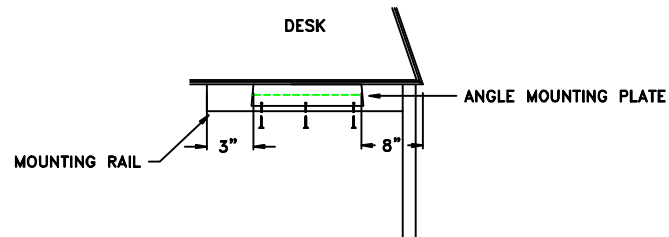

2. SECURE BRIDGE MODESTY PANEL TO END PANELS OF DESK AND, OR CREDENZA WITH THE TWO PLAT PLATES. USE THE (12) #8- 3/4" SCREWS PROVIDED. ATTACH THE (2) METAL ANGLE BRACKETS, BEING SURE TOP EDGE OF BRACKET IS FLUSH WITH TOP EDGE OF THE BACK PANEL USING (4) #8 X 3/4" SCREWS PROVIDED.

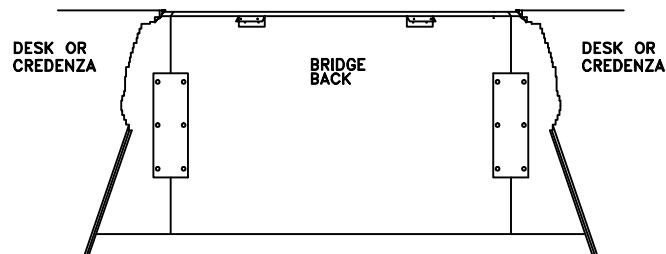

3. CAREFULLY POSITION TOP ONTO MOUNTING PLATES PREVIOUSLY ATTACHED IN STEP 1. MAKE SURE TOPS OF DESK AND CREDENZA ARE FLUSH WITH BRIDGE TOP AND FASTEN THROUGH MOUNTING PLATES USING (6) #8 X 3/4" SCREWS.

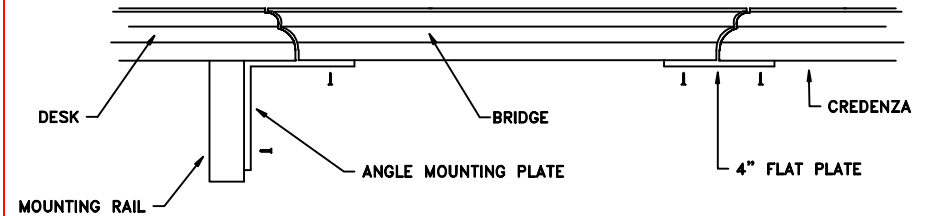

NOTE: IF DESK AND OR CREDENZA ARE NOT LEVEL WITH EACH OTHER, AN OPENING MAY APPEAR ON THE TOP/BOTTOM EDGE OF BRIDGE TOP AND ONE/BOTH OF CONNECTING TOPS. TO ADJUST HEIGHT OF DESK/CREDENZA'S TURN LEVELING GUIDES ON BOTTOM OF END PANELS AS NEEDED.

5. SECURE BRIDGE MODESTY PANEL TO BRIDGE TOP USING, (8) #8- 3/4 SCREWS PROVIDED.

