
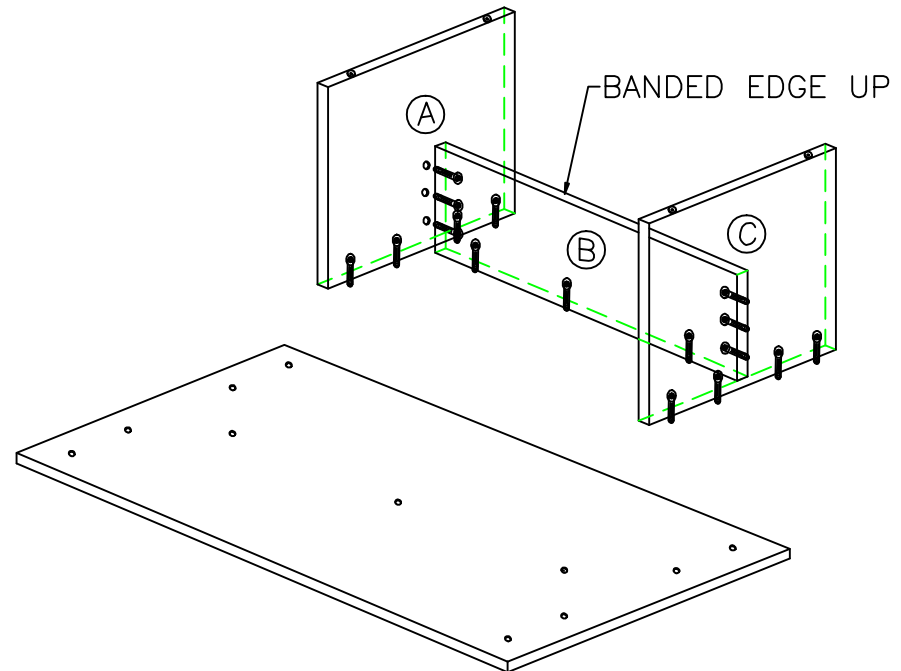


COFFEE TABLE & END TABLE ASSEMBLY INSTRUCTIONS

- (1) REMOVE ALL PARTS FROM CARTON AND LAY FLAT WITH HOLES UP.
- (2) INSERT CAMS INTO ALL 15MM HOLES WITH ARROWS POINTED TO THROUGH HOLES.
- (3) INSERT DOWEL PINS INTO CAMS THROUGH HOLES IN THE ENDS OF ALL PANELS.
- (4) ASSEMBLE A-B & C PANELS BY INSERTING END OF DOWELS INTO 8MM HOLES.
- (5) LOCK CAMS BY TURNING CLOCKWISE 1/2 TURN WITH SCREW DRIVER.
- (6) WITH HELP LIFT COMPLETE PANEL SYSTEM ONTO TOP & ALIGN DOWEL PINS WITH 8MM HOLES.
- (7) LOCK ALL REMAINING CAMS 1/2 TURN CLOCKWISE WITH SCREW DRIVER.
- (8) PRESS PLASTIC CAM COVERS PROVIDED INTO ALL CAMS.
- (9) TURN UNIT UPRIGHT.

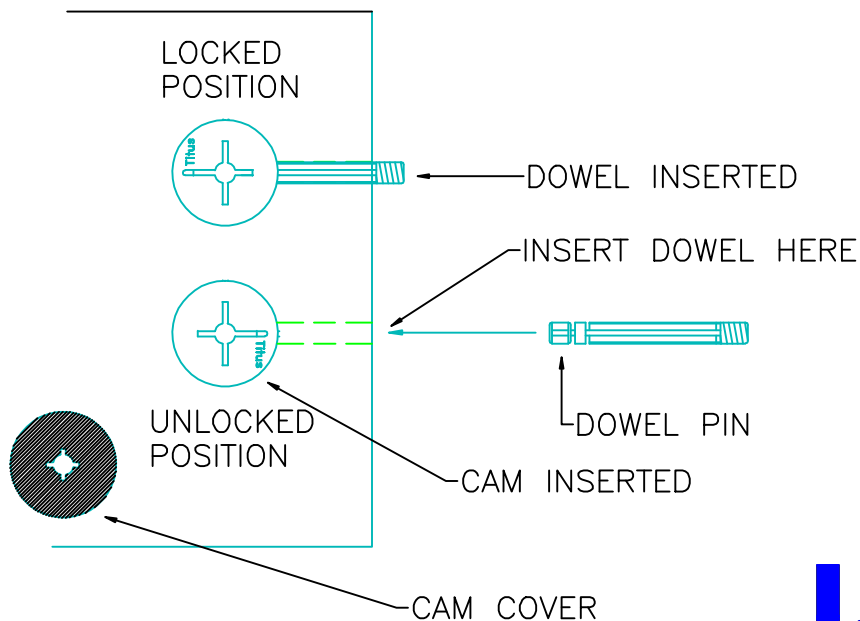

h
HPFI
www.HPFI.com