




PowerFlex Cove™ Installation Sheet

Instructions for use:


1. Determine the surface cutout required for the Cove model being installed, see Fig. 1, and prepare the surface.
2. Remove the thumb nut and brackets from the studs, see Fig. 2.
3. Insert the Cove through the cutout.
4. Replace the brackets and thumb nut. Tighten the nuts, or screws until secure. Be careful to not overtighten.

Figure 1

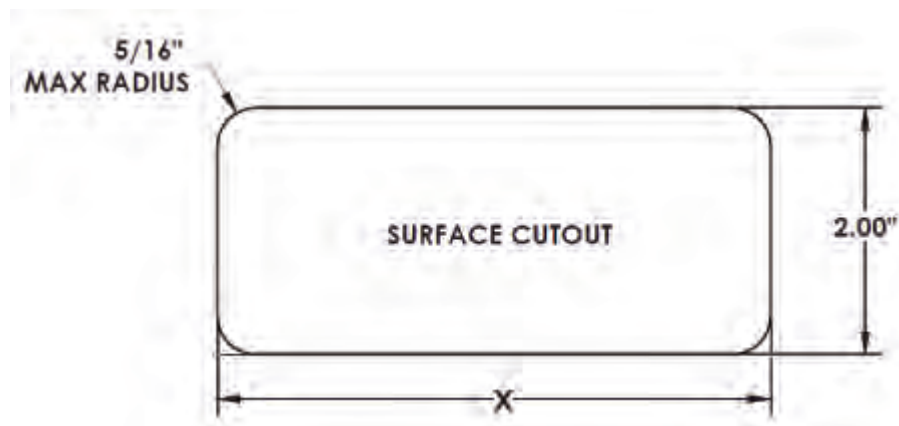

X = .5" less than total length of Cove model, e.g. 5.75" length requires a 5.25" cutout

Figure 2

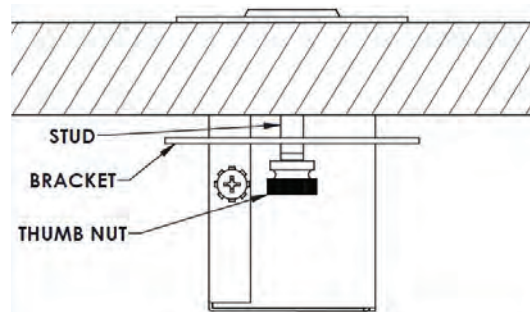

Mounts to Surface Thicknesses: .75" -1.25"