


Hyperwork

Desk Return

Tools Needed

- Phillips screwdriver or Phillips bit


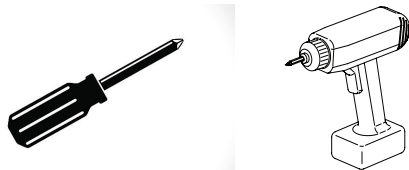


Parts Included	Quantity
1. Flat Plate	1
2. Short Screws for Flat Plates	6
3. Long Screws for Back Panel	3



Step 1

Use three (3) of the Short Screws (Part 2) from the bag to secure the Flat Plate (Part 1) to the underside of the Desk Return top centered front to back as shown at right.

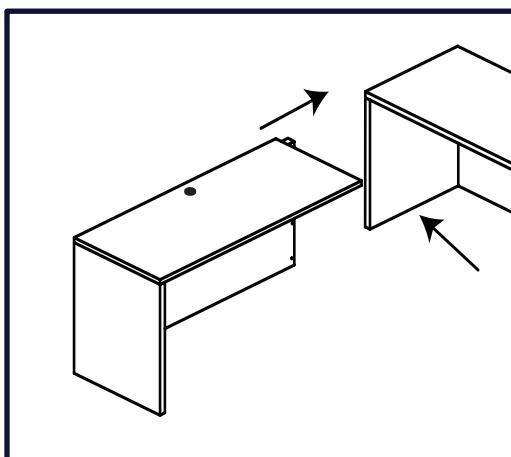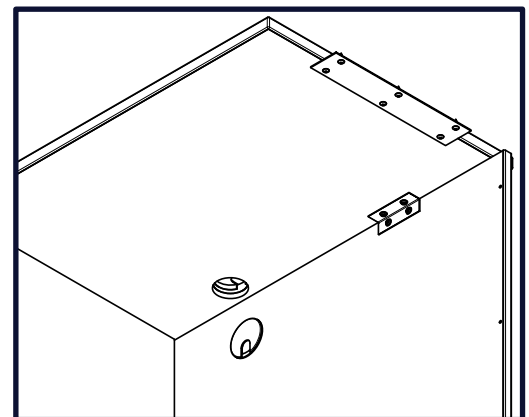


Step 2

Place the Return snugly against your Table Desk with the top surfaces even and the back panel of the Desk Return flush against and inside the end panel of your Table Desk. Using the three (3) remaining Short Screws (Part 2), secure the Flat Plate (Part 1) which you attached in Step 1 to the underside of the panel end of your Table Desk top.

Step 3

Make certain that the back panel is inside the Table Desk end panel. Using the three (3) Long Screws (Part 3) from the hardware bag to secure the back panel of the Desk Return into the end panel of your Table Desk.

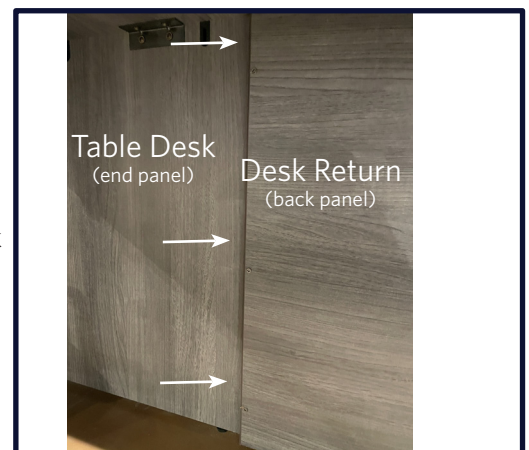

NOTE: Be certain to adjust the floor leveling glides to keep the top surface of the Desk and Return level.