

Hyperwork

Table Desk (4 columns)

HPFi



Hyperwork table desks with four (4) column legs offer maximum flexibility, versatility and a contemporary aesthetic for the modern, open office. Assembly is simple and easy with attachment of the column legs and modesty panel.

Parts	Quantity
1. Top	1
2. Column Legs	4
3. Washer Head Screws (#10 x 3/4")	42
4. Stabilizer Bar	1
6. Acrylic Modesty Panel	1
7. Modesty Panel Brackets	2
8. Silver Screws (Modesty Panel)	4

Tools Needed

- Phillips head screwdriver or power drill with Phillips bit




Step 1. Attach Leg Plates

After carefully removing all parts from the shipping carton, place the top on a smooth, clean work surface with the pre-drilled holes (bottom) facing up. The leg plates from the inner carton of Column Legs (Part 2) should be placed in the four (4) corners of the Top (Part 1) aligned with the pre-drilled holes. Secure the Leg Plates with eight (8) each of the #10 x 3/4" (Part 3) screws.

Step 2. Install Legs to Top

Carefully thread legs onto each corner Leg Plate. Grip each leg firmly with two (2) hands and tighten until they are each properly seated with no wobble. Insert leveling glides into the bottom of each leg column and hand tighten. Glides may be adjusted to compensate for uneven floors when turned upright and placed for use.

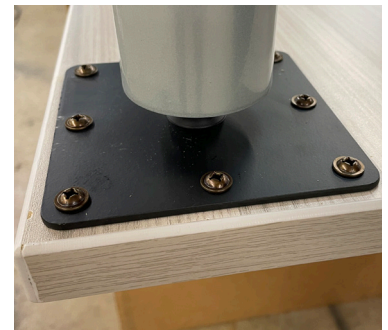

Step 3. Attach Stabilizer Bar

Place the stabilizer bar in the center (side-to-side and end-to-end) of the underside of the Top (Part 1) as shown. Carefully remove the bag of screws (Part 5) from the Stabilizer Bar (Part 4) with scissors or a utility knife. Using ten (10) #10 x 3/4" Screws (Part 3), secure the Stabilizer Bar (Part 4). This will ensure that the top does not bow over time.

NOTE: The Stabilizer Bar should **NOT** be attached if Mobile Pedestals are used underneath the work surface. Two Mobile Pedestals will not fit with a Stabilizer bar installed, but they should provide the support for the top needed to prevent bowing. A single Mobile Pedestal will fit underneath if the Stabilizer Bar is offset to the side opposite the Mobile Pedestal.

Step 4. Attach Modesty Panel to Top

Attach the two (2) Modesty Panel Brackets (Part 9) to the underside of the Top (Part 1) with two (2) each of the #6 x 1 1/4" Modesty Panel Screws (Part 10) in the pre-drilled holes in the Top (Part 1). Then place the Acrylic Modesty Panel in the slots of the Modesty Panel Brackets (Part 9) and tighten the pre-installed set screws with the included Allen Wrench.

