

Hyperwork

Round Meeting Table



Tools Needed


- Power Screwdriver or Manual with Interchangeable Bits
- #2 Square Drive Bit

Tools & Hardware Provided

- Ball End 4mm Allen Bit
- #10 x 3/4" Screws (16)
- #8 x 1-1/2" Screws (2)
- Connector Pin Covers (7)
- 90-Degree Top Brackets (4)
- Flat Center Support Bracket


Step 1

Place the table top on a smooth, clean surface (cardboard or blanket) on the floor. Assemble the three (3) pieces of the base using the supplied Ball End Allen Bit - four (4) in one small leg panel and three (3) in the other leg panel.

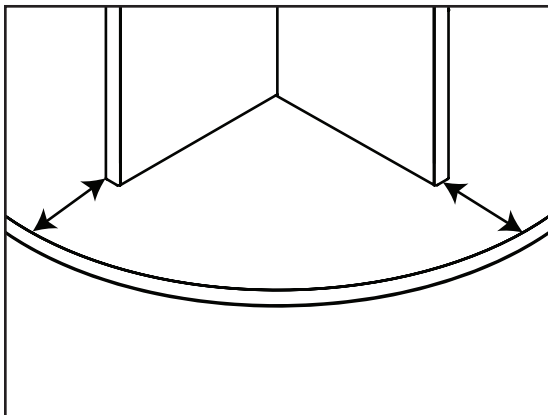


Step 2

Make certain that the base assembly is centered on the top. 48" diameter tables should be 12" from the edge of the table top to the outside edge of the base assembly. 36" and 42" diameter tables should be 6" from the edge of the table top to the outside edge of the base assembly.

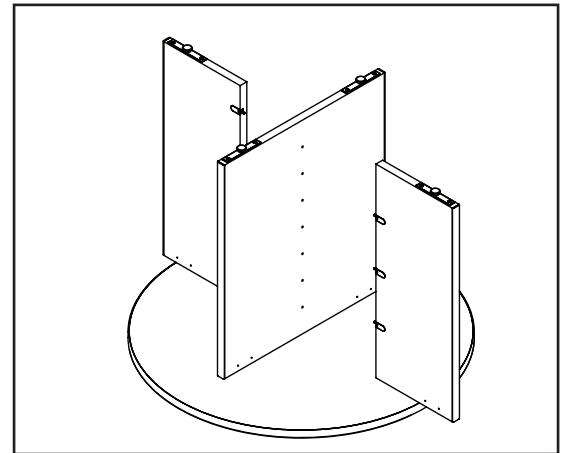


Step 3

Secure the four (4) 90-Degree Top Brackets to the base assembly using two (2) each of the #10 x 3/4" Screws per bracket. Then secure each of the 90-Degree Top Brackets with two (2) each of the #10 x 3/4" Screws per bracket. Finally, attach the Flat Center Support Bracket with the two (2) #8 x 1-1/2" Screws as shown.

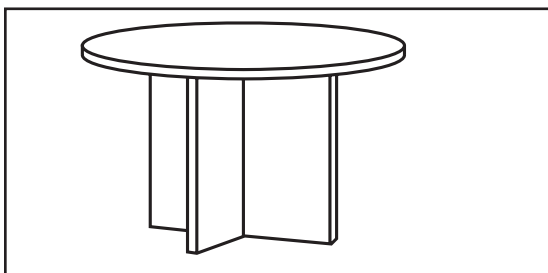

Step 4

With assistance, turn the table upright and place into position. Adjust the four (4) factory-installed adjustable floor glides as needed to ensure the table top is level.

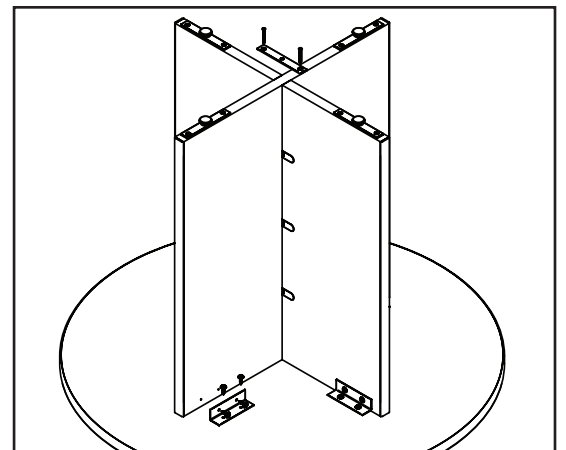

NOTE: Periodically check that the bolts on the bases are secure. Moving the table to another room or location may require the bolts to be re-tightened.